

**DIGI  
SIGHT****DigiSight Nano**

**WARNING:** Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.




*Age Recommendation:  
Not for children under  
14 years. This is not a  
toy.*

**NOTICE:** This product is only intended for use with unmanned, hobby- grade, remote-controlled vehicles and aircraft. FOXEEER disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

**SUPPORT:** Visit [www.foxeer.com/](http://www.foxeer.com/) to get more information.

**CAMERA-OSD SWITCH CONNECTION**

Camera Back

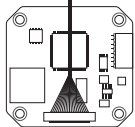

Digital VTX

**CAMERA-VIDEO TRANSMITTER CONNECTION**

Plug the ribbon cable from the camera to the video transmitter.

**FPV OSD Setup**

Press VTX programming board top button for 3s, you can access OSD menu.

|         |                 |
|---------|-----------------|
| DISPLAY | ON              |
| TIME    | DAY             |
| ▶ SCENE | 4:3             |
| SIZE    | 60FPS           |
| SYSTEM  | FOXEEER_HD_V1.0 |
| VER:    | EXIT ↵          |

1. TIME: ON/OFF
2. SCENE: DAY/ NIGHT/ LED/ B&W.

**Quick switch:** At standby status, long press the right button on OSD board, it can fast change the SCENE, the current mode will show once at the TIMER place.

3. SIZE: 4:3/16:9 switchable.
4. SYSTEM: 60/50FPS switchable.
5. VER: FOXEEER\_HD\_V1.0.

**Main MENU**

|              |         |
|--------------|---------|
| SETUP MENU   |         |
| ▶ CAMERA ID  | ON ↵    |
| PICT ADJUST  | ↵       |
| DAY / NIGHT  | AUTO    |
| LANGUAGE     | ENGLISH |
| CAMERA RESET | YES ↵   |
| EXIT ↵       |         |

**MENU:** Push MENU(center button) to go to the main menu.

**UP/DOWN:** Move up and down through the menu.

**Left/Right:** Modify the menu parameters.

**1. Camera ID**

**Camera ID:** ON/OFF. You can setup pilot name and position.

|  |       |
|--|-------|
| CAMERA ID                                | 00:0  |
| FOXEEER                                  | 00:00 |
| A B C D E F G H I J K L M N O P Q        |       |
| R S T U V W X Y Z 0 1 2 3 4 5 6 7 8      |       |
| 9 - ! " # \$ % & ( ) _ ' , ; : < = > ? @ |       |
| ~ * - x + /                              |       |
| --11 CLR POS ▷                           |       |
| RETURN                                   | ↵     |

**2. PICT ADJUST**

|             |     |
|-------------|-----|
| PICT ADJUST |     |
| ▶ FLIP      | OFF |
| BRIGHTNESS  | 122 |
| CONTRAST    | 136 |
| SHARPNESS   | 160 |
| HUE         | 090 |
| COLOR GAIN  | 136 |
| RETURN ↵    |     |

1. FLIP: OFF/ H-FLIP/V-FLIP/ HV-FLIP
2. BRIGHTNESS
3. CONTRAST
4. SHARPNESS
5. HUE
6. COLOR GAIN

**3. DAY/NIGHT**

DAY/NIGHT include "AUTO" and "MANUAL", click "MANUAL", you can setup permanent "COLOR" or "B/W".

|             |       |
|-------------|-------|
| DAY/NIGHT   |       |
| ▶ DAY/NIGHT | COLOR |
| RETURN ↵    |       |

**4. LANGUAGE**

7 Languages: ENGLISH/ DEUTSCH/ FRANCAIS/ PYCCKNN/ PORTUGUES/ ESPANOL/ 中文.

**5. Camera reset****6. EXIT**

**Save All:** Save all setup.

**Not Save:** Can save the value temporary, but once power off, the value won't save.

**cancel:** Cancel Setup.

**DIGI SIGHT****DigiSight Nano**

**警告:** 操作前, 请阅读说明书全部内容来熟悉产品功能。操作不当, 可能会造成本产品及其它个人财产受损, 产生严重后果。



**不适合14岁以下儿童使用, 本产品不是儿童玩具。**


**注意:** 本产品只适用于玩具级无人遥控车和飞机, FOXEEER拒绝承担任何违背产品设计初衷使用所产生的后果, 而且对此不会提供维修服务。

**技术支持:** 访问[www.foxeer.com](http://www.foxeer.com)来获取更多信息。

## 摄像头-OSD连接



摄像头背面

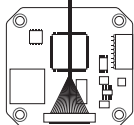


数字图传

## 摄像头-图传连接

 带状电缆连接到高清图传

## OSD菜单设置

长按图传菜单板上键3秒, 进入OSD菜单。



1. TIME(时间): 开/ 关
2. SCENE: DAY/NIGHT/LED/ B&W。(白天、晚上、LED灯、黑白)  
快捷操作: 在待机模式下, 长按OSD板右键3秒, 可以快速切换模式, 当切换成功时, 显示屏右下角时间位置会显示一次当前模式。
3. SIZE(尺寸): 4:3/16:9可切换。
4. SYSTEM(系统): 60/50FPS可切换
5. VER: FOXEER\_HD\_V1.0。

## 主菜单




**菜单:** 按压菜单 (中键) 进入主菜单  
上/下: 操控菜单单项向上/向下  
左/右: 调节菜单中的参数

## 1. 摄像机标识码

摄像机标识码: 开/ 关, 可以设置飞手名字和显示位置。



## 2. 图像调整

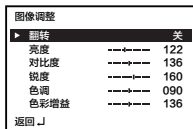

1. 翻转: 关/ 水平/ 垂直/ 水平垂直
2. 亮度
3. 对比度
4. 锐度
5. 色调
6. 彩色增益

## 3. 日/夜模式

日/夜模式: 包括“自动”和“手动”。点击“手动”, 你可以设置“彩色”或“黑白”。



## 4. 语言

7种语言: 英语/ 德语/ 法语/ 俄罗斯语/ 葡萄牙语/ 西班牙语/ 中文。

## 5. 摄像机复位

## 6. 退出

全部保存(SAVE ALL): 保存所有设置。

不保存: 临时保存设置, 断电之后不保存。

取消: 取消所有设置。